



### Benefits

- Eliminates waste due to improper glove loading
- Reduces glove cuffing and loading labor by 50 %
- Improves cuffing and folded wallet quality
- Ergonomic presentation of cuffing fixture
- Continuous motion allows for easy loading
- Glove orientation prior to placement
- Adjustable cuff length stop
- Automatic jam detection
- Fully validated, GMP, CE and OSHA compliant

Doyen's AGPM places Surgical Gloves for walleting into the GPM packaging machine.



For Placing

Surgical Gloves

Into GPM machine




# Glove Placing System - AGPM




## TECHNICAL INFORMATION



Auto-Glove Placement

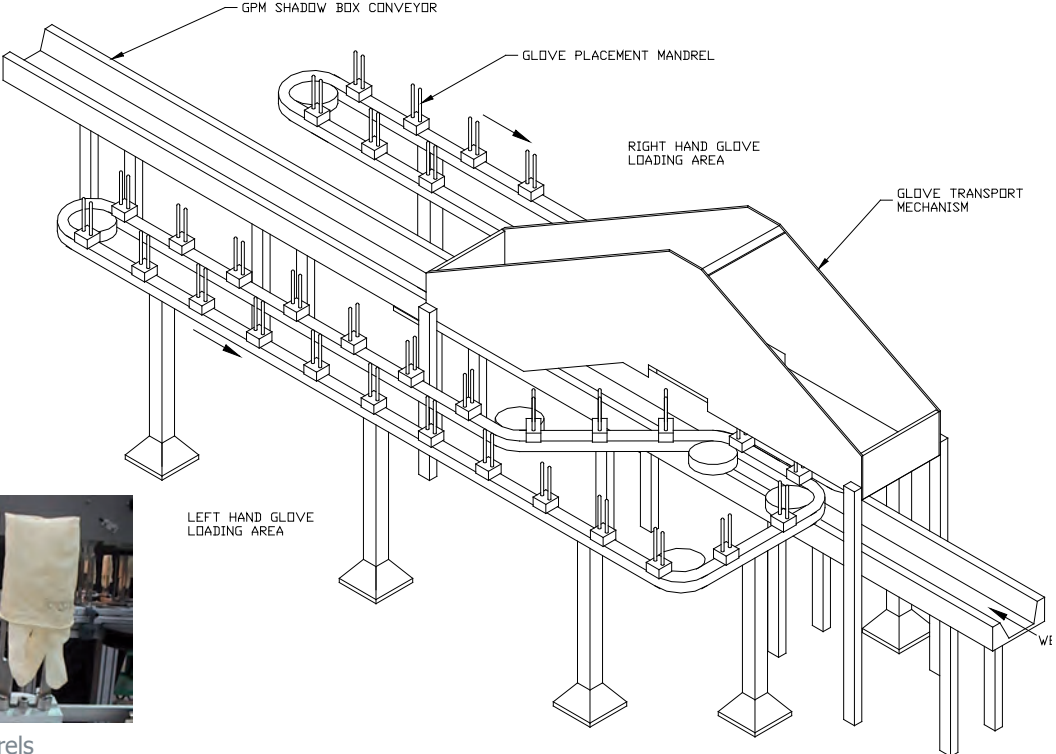

Transport Mechanism

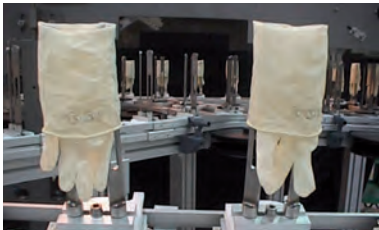

Cuffing mandrels

Operators stand adjacent to the Transport Mechanism and place Gloves on the moving Cuffing Mandrels.

The glove is carried along the transport mechanism into the glove gripping area where Glove Grippers remove the gloves from the mandrels.

Next, the glove is carried to the GPM shadow box, where it is placed accurately onto the moving packaging web.

**Europe**  
**Doyen Medipharm Ltd**  
 Gateway 11 Business Park, Copper Smith Way,  
 Wymondham, Norfolk, NR18 0WY, UK  
 Tel: (+44) 01953 600078 - Fax: (+44) 01953 605069  
 sales@doyenmedipharm.co.uk

**North and South America**  
**Doyen Medipharm LLC**  
 4030 South Pipkin Road, Suite 102,  
 Lakeland, Florida 33811, USA  
 Tel: (+1) 863-683-6335 - Fax: (+1) 863-683-6857  
 salesUS@doyenmedipharm.com

**Asia**  
**Doyen Medipharm Ltd**  
 5008 Jalan Lunas, First Floor, Batu 2 1/2  
 Kulim, Kedah Darul Aman, Malaysia  
 Tel: (+604) 495 1619 - Fax: (+604) 495 1697  
 Surren@DoyenMY.com



[www.doyenmedipharm.com](http://www.doyenmedipharm.com)